


METEOR 350_EURO 5_WIRING HARNESS CIRCUIT SCHEMATICS

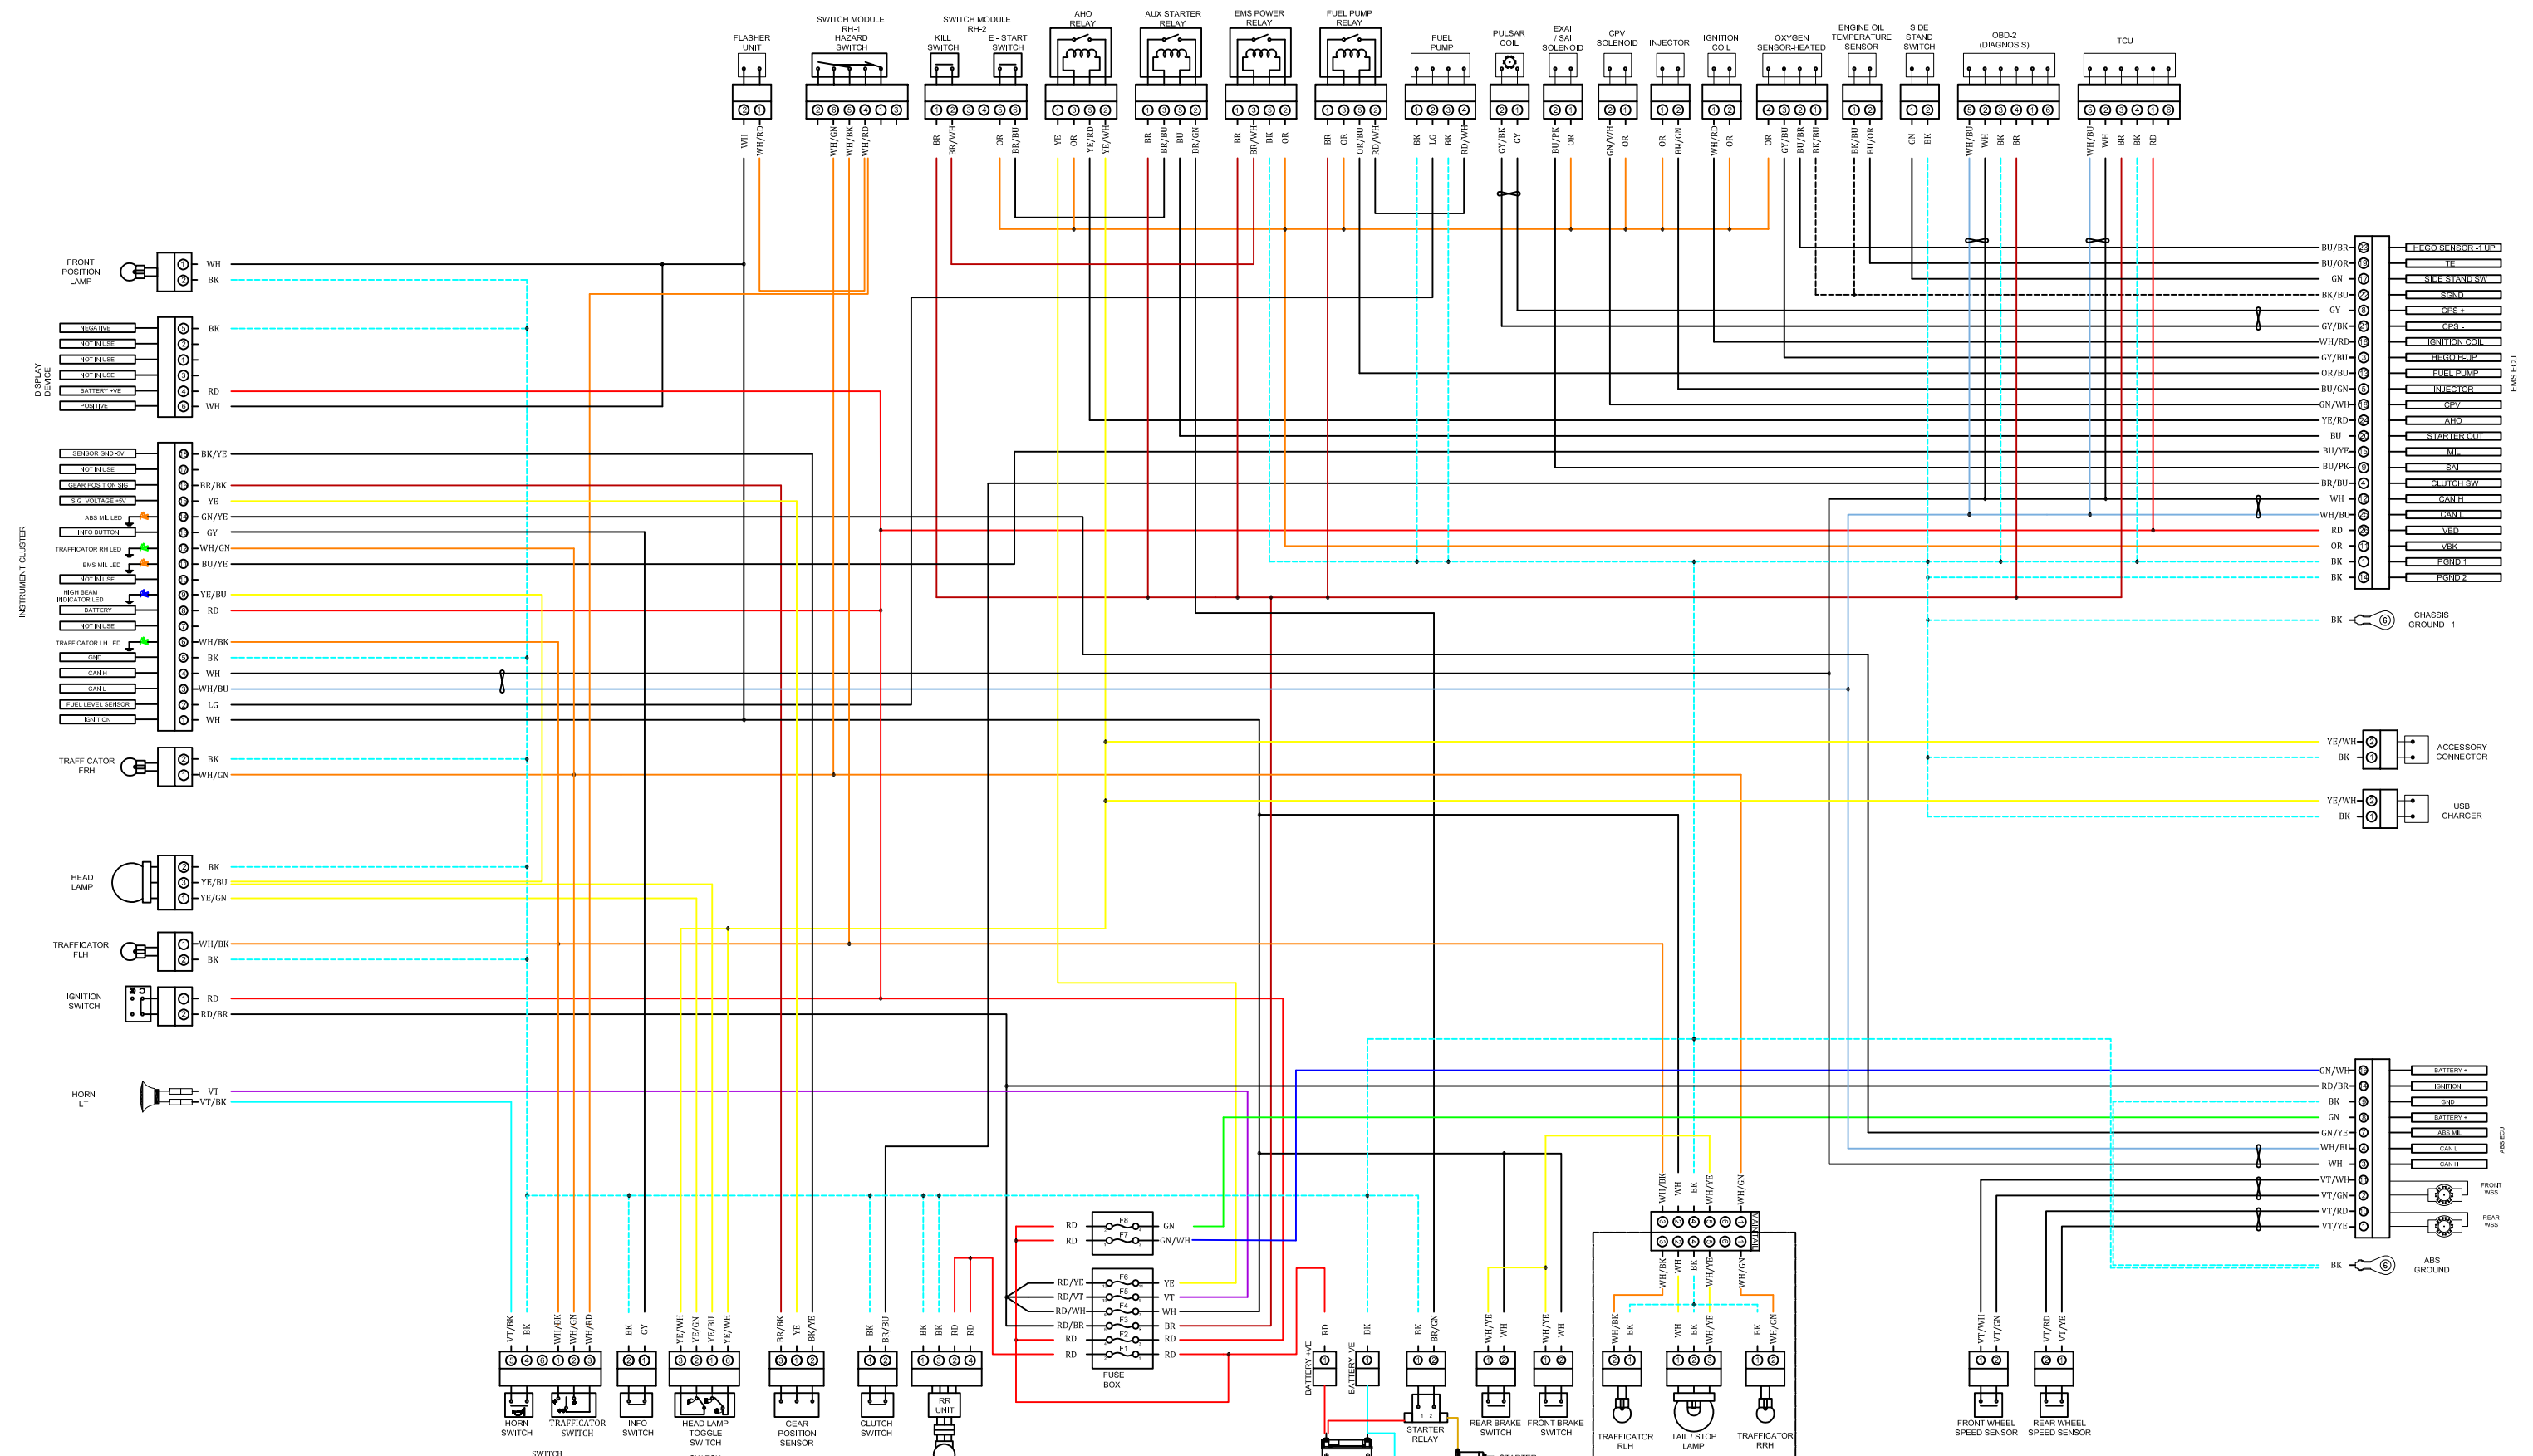

ID	DESCRIPTION	RATING
F1	CHARGING FUSE	25A
F2	MAIN FUSE	25A
F3	IGNITION FUSE (EFI)	15A
F4	SIGNALING FUSE	10A
F5	HORN FUSE	10A
F6	LIGHTING FUSE	15A
F7	ABS FUSE 1	10A
F8	ABS FUSE 2	15A

COLOUR CODE	
BK	BLACK
BR	BROWN
BU	BLUE
GN	GREEN
GY	GRAY
LG	LIGHT GREEN
OR	ORANGE
PK	PINK
RD	RED
VT	VIOLET
WH	WHITE
YE	YELLOW

EAS ECU	
BU/BR	INJECTOR 5
BU/OR	INJECTOR 6
GN	SIDE STAND SW (SEN)
BK/BU	GPS +
GY/BR	GPS -
WH/RD	IGNITION LOCK
CY/BU	HEGO 1
OR/BN	FUEL PUMP
GN/WH	KEY
YE/RD	ABS
BU	STARTER RELAY
BU/YE	MIL
BU/BU	SAI
BR/BU	CLUTCH SW
WH	CAN H
WH/BU	CAN L
RD	VBK
OR	VBK
BK	PSM 1
BK	PSM 2

ABS ECU	
GN/WH	BATTERY +
RD/BR	IGNITION
BK	GND
GN	BATTERY +
GN/YE	ABS ML
WH/BL	CAN L
WH	CAN H
VT/WH	FRONT WSS
VT/GN	FRONT WSS
VT/RD	REAR WSS
VT/YE	REAR WSS
BK	ABS GROUND